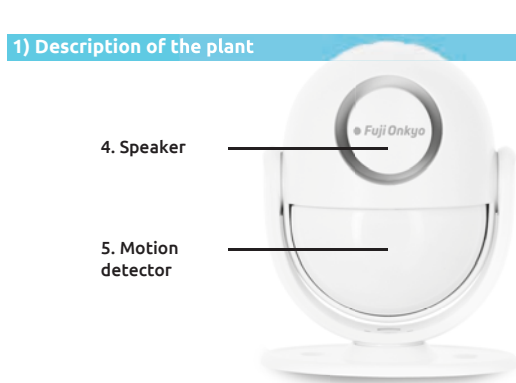
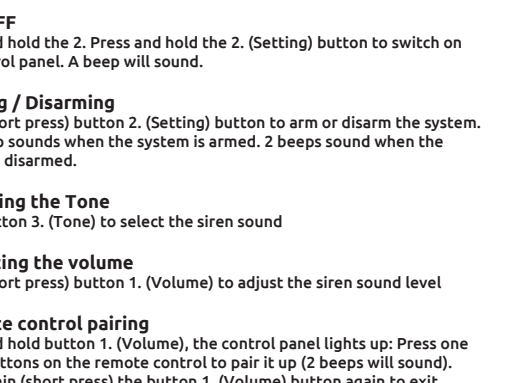
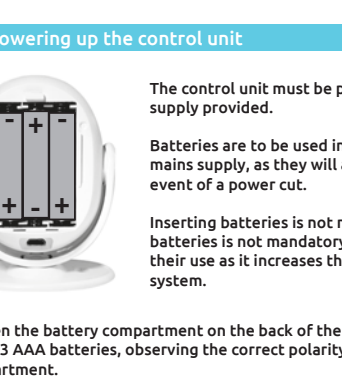
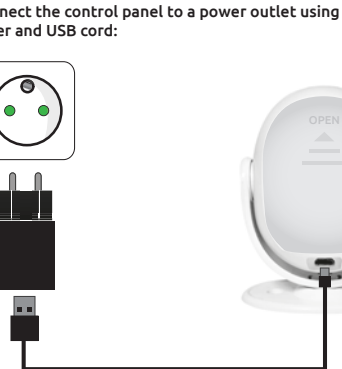
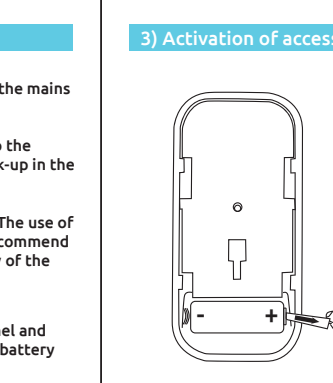
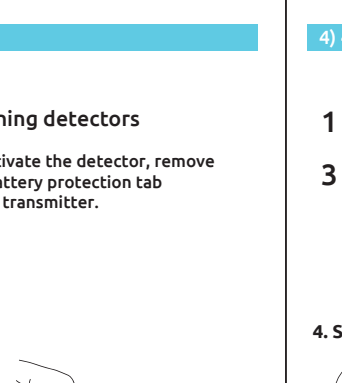
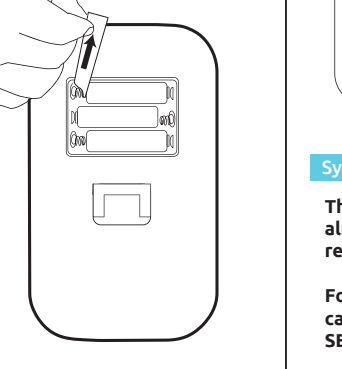
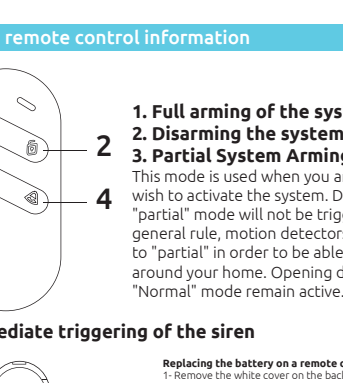
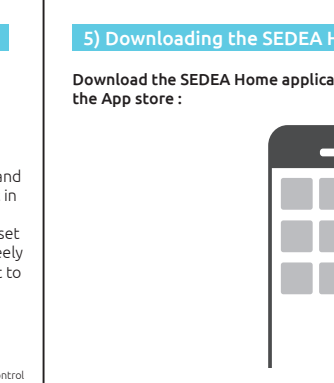
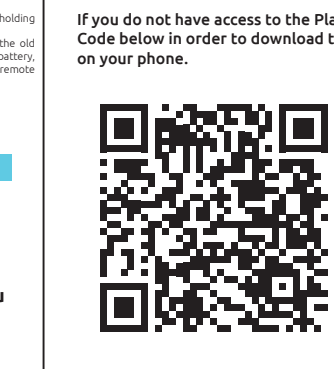
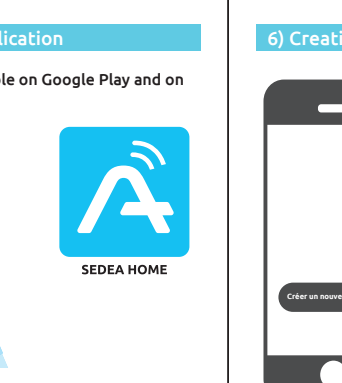
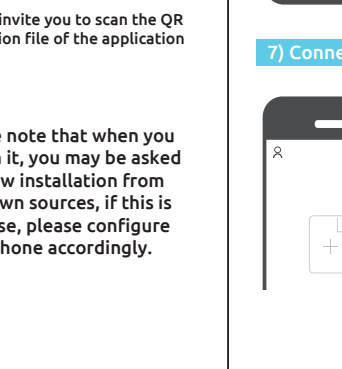
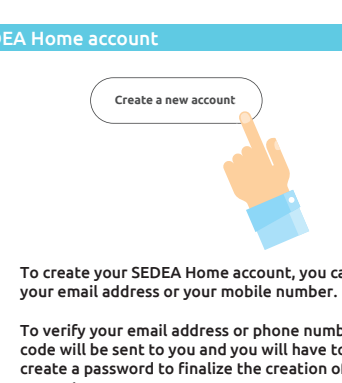
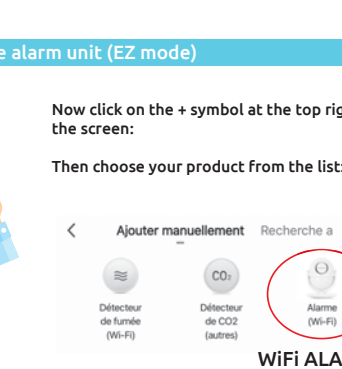
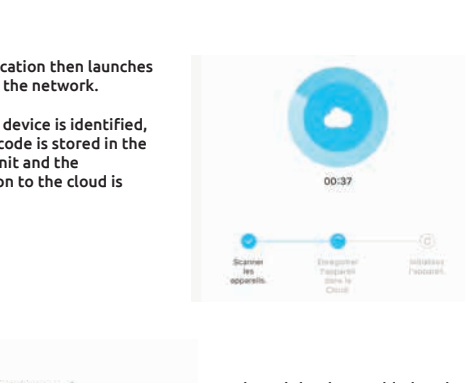
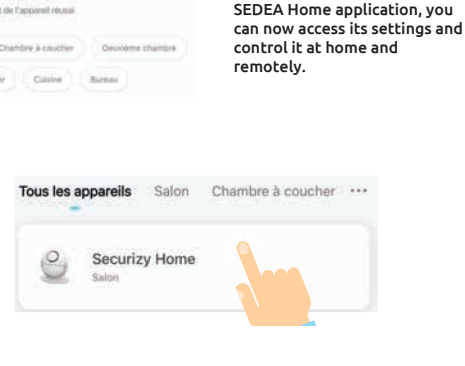
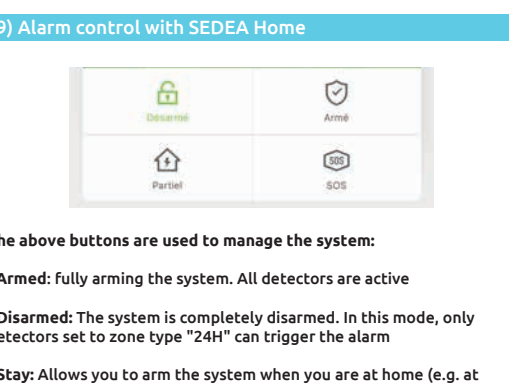


	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191	192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255	256	257	258	259	260	261	262	263	264	265	266	267	268	269	270	271	272	273	274	275	276	277	278	279	280	281	282	283	284	285	286	287	288	289	290	291	292	293	294	295	296	297	298	299	300	301	302	303	304	305	306	307	308	309	310	311	312	313	314	315	316	317	318	319	320	321	322	323	324	325	326	327	328	329	330	331	332	333	334	335	336	337	338	339	340	341	342	343	344	345	346	347	348	349	350	351	352	353	354	355	356	357	358	359	360	361	362	363	364	365	366	367	368	369	370	371	372	373	374	375	376	377	378	379	380	381	382	383	384	385	386	387	388	389	390	391	392	393	394	395	396	397	398	399	400	401	402	403	404	405	406	407	408	409	410	411	412	413	414	415	416	417	418	419	420	421	422	423	424	425	426	427	428	429	430	431	432	433	434	435	436	437	438	439	440	441	442	443	444	445	446	447	448	449	450	451	452	453	454	455	456	457	458	459	460	461	462	463	464	465	466	467	468	469	470	471	472	473	474	475	476	477	478	479	480	481	482	483	484	485	486	487	488	489	490	491	492	493	494	495	496	497	498	499	500	501	502	503	504	505	506	507	508	509	510	511	512	513	514	515	516	517	518	519	520	521	522	523	52
--	---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	----

 Installation guide no-470860-2106-Kit-SecurityHome	Contents of the pack : - 1 connected alarm unit with integrated motion detector - 2 motion detectors - 2 opening detectors - 6 AAA batteries + 2 23A batteries - 1 installation guide - 2 double-sided stickers Features : Alarm control unit: - Power supply: 3.0V (3 AAA batteries) or via mains adapter + USB cable supplied - Transmission distance: 100m (in free field) - Sound power of the siren: 105 dB - Expandable up to 4 remote controls and 24 detectors - Remote connection via the SEDEA Home application (TUYA compatible) - Radio frequency band: 433 MHz / 433.92 MHz - WiFi Frequency band IEEE 802.11b/g/n: 2412MHz-2472MHz - Maximum emitted power: 8.07 mW e.i.r.p. Motion detectors: - Power supply: 3 AAA batteries - Detection range: 8 metres / 110' - Frequency band: 433 MHz / 433.92 MHz - Maximum emitted power: 3.17mW Opening detectors: - Power supply: 12V (23A battery) - Frequency band: 433 MHz / 433.92 MHz - Maximum emitted power: 3.17mW 4-button remote controls: - Power supply: Battery 3x type CR2032 - Arming, disarming, sos and chime - Frequency band: 433 MHz / 433.92 MHz - Maximum transmitted power: 0.065mW - Compatible with SECURIZY alarm accessories USB power adapter: Manufacturer: Manufacturer: Shenzhenhi Xiangsheng Technology Co.Ltd Model: XSUE050-100-U Input voltage: 100-240V AC Input AC frequency: 50/60Hz Output voltage: 5.0V DC Output current: 1.0A Output power: 5.0W Average efficiency in active mode: 74.28% No-load power consumption: 0.07W	1) Description of the plant  Note: The following functions allow you to set the control panel and pair the accessories manually. For information, the accessories included in this alarm kit are already associated with the central unit. It is therefore not necessary to pair them. For more complete settings, you can also connect the control panel via WiFi and install the SEDEA Home application (see chapter "Downloading the SEDEA Home application").	- ON/OFF Press and hold the 2. Press and hold the 2. (Setting) button to switch on the control panel. A beep will sound. - Arming / Disarming Press (short press) button 2. (Setting) button to arm or disarm the system. One beep sounds when the system is armed. 2 beeps sound when the system is disarmed. - Changing the Tone Press button 3. (Tone) to select the siren sound - Adjusting the volume Press (short press) button 1. (Volume) to adjust the siren sound level - Remote control pairing Press and hold button 1. (Volume), the control panel lights up: Press one of the buttons on the remote control to pair it up (2 beeps will sound). Press again (short press) the button 1. (Volume) button again to exit pairing mode. - Deleting all remote controls Press and hold button 1. (Volume), the control panel lights up: Press and hold button 1. (Volume) again, 4 BEEPS will sound: all remote controls are deleted. - Detector pairing Press and hold button 3. (Tone), the control unit lights up: trigger the detector to pair it (2 beeps sound). Press again (short press) the button 1. (Volume) button again to exit pairing mode. - Deleting all detectors Press and hold button 3. Press and hold button 3. (Tone), the control panel lights up: Press and hold button 3. (Tone) again, 4 beeps sound: All the detectors are deleted.	2) Powering up the control unit The control unit must be powered by the mains supply provided. Batteries are to be used in addition to the mains supply, as they will act as a back-up in the event of a power cut. Inserting batteries is not mandatory. The use of batteries is not mandatory, but we recommend their use as it increases the autonomy of the system.  1. Open the battery compartment on the back of the control panel and insert 3 AAA batteries, observing the correct polarity. Close the battery compartment. 2. Connect the control panel to a power outlet using the supplied AC adapter and USB cord:	3) Activation of accessories Opening detectors To activate the detector, remove the battery protection tab in the transmitter.  Motion Detectors To activate the detector, remove the battery protection tab on the back of the detector 	4) 4-button remote control information  1. Full arming of the system 2. Disarming the system 3. Partial System Arming: This mode is used when you are at home and wish to activate the system. Detectors set in "partial" mode will not be triggered. As a general rule, motion detectors should be set to "partial" in order to be able to move freely around your home. Opening detectors set to "Normal" mode remain active. 4. SOS: immediate triggering of the siren Replacing the battery on a remote control 1- Remove the white cover on the back of the remote control 2- Use a Phillips screwdriver to unscrew the screw on the remote control casing 3- Then use a Phillips screwdriver to unscrew the screw holding the electronic board 4- Carefully turn the electronic board over and slide the old battery out of its housing. Then insert the new battery, respecting the polarity, and reassemble the remote control Battery: CR2032 System ready for operation The accessories (detectors and remote controls) are already paired with the control panel, so the system is ready for use. The system is therefore ready for use. For a more complete setting and control of the system, you can also connect the control panel to WiFi and install the SEDEA Home application.	5) Downloading the SEDEA Home application Download the SEDEA Home application available on Google Play and on the App store :  If you do not have access to the Playstore, we invite you to scan the QR Code below in order to download the installation file of the application on your phone.  Please note that when you launch it, you may be asked to allow installation from unknown sources, if this is the case, please configure your phone accordingly.	6) Creating a SEDEA Home account To create your SEDEA Home account, you can use your email address or your mobile number. To verify your email address or phone number, a code will be sent to you and you will have to create a password to finalize the creation of your account. Important note: The alarm unit must be connected to a 2.4 GHz WiFi network. If your router (Internet box) broadcasts 2 WiFi bands (2.4 GHz and 5 GHz), consult your operator to know how to select the 2.4 GHz WiFi band. 	7) Connecting the alarm unit (EZ mode) Now click on the + symbol at the top right of the screen: Then choose your product from the list:  WIFI ALARM The unit has been added to the SEDEA Home application, you can now access its settings and control it at home and remotely. Entering the "WiFi EZ Connection" mode: Press and hold the "Volume" and "Tone" buttons to enter the EZ connection mode. The control unit emits 3 beeps and then flashes rapidly in red. 	8) Connecting the alarm unit (AP mode) If the EZ connection did not work, you can try this second method (AP) which consists of connecting directly to the central unit in order to transmit the WiFi access of your home. Click on the + symbol at the top right of the screen: Then choose your product from the list:  WIFI ALARM The application will then guide you through the process of checking the status of your alarm system and connecting it to your WiFi network. Enter the password of your WiFi network as soon as you are asked (WiFi network on which your smartphone is connected) and then click on NEXT. Important note: The alarm unit must be connected to a 2.4 GHz WiFi network. If your router (Internet box) broadcasts 2 WiFi bands (2.4 GHz and 5 GHz), consult your operator to know how to select the 2.4 GHz WiFi band. 	Then click on the top right corner to select the AP mode:  Entering the "WiFi AP Connection" mode: Press and hold the "Setting" and "Tone" buttons to enter the AP connection mode. The control unit emits 3 BEEPS then flashes blue. Click to confirm that the light is flashing rapidly and then click Next.  Read the instructions on the next screen and then click on "Connect" to go to the connection settings of your smartphone. In the list of available WiFi networks, one of them will be named "Smartlife" followed by 4 numbers. Connect to this network and come back to the SEDEA Home application.
The application then launches a scan on the network. Once the device is identified, the WiFi code is stored in the control unit and the connection to the cloud is made.  The unit has been added to the SEDEA Home application, you can now access its settings and control it at home and remotely. 	9) Alarm control with SEDEA Home  The above buttons are used to manage the system: - Armed: fully arming the system. All detectors are active - Disarmed: The system is completely disarmed. In this mode, only detectors set to zone type "24H" can trigger the alarm - Stay: Allows you to arm the system when you are at home (e.g.										

[illegible]